





AVK SERIES 34 WALL MOUNTED & TELESCOPIC POST INDICATORS, UL LISTED, FM APPROVED FIELD MAINTENANCE AND INSTRUCTION MANUAL

TABLE OF CONTENTS

EXPLODED ASSEMBLY / PARTS LIST INTRODUCTION / DESCRIPTION

- MAINTENANCE
- TOOL REQUIREMENTS
- ADJUSTING TARGET SERIES 3400
- ADJUSTING TARGET SERIES 3480
- MOUNTING SERIES 3400 TO VALVE
- ADJUSTING TO GROUND LEVEL
- WALL POST SELECTION CHART
- MOUNTING SERIES 3480 TO VALVE
- INSTALLATION OF A SUPERVISORY SWITCH

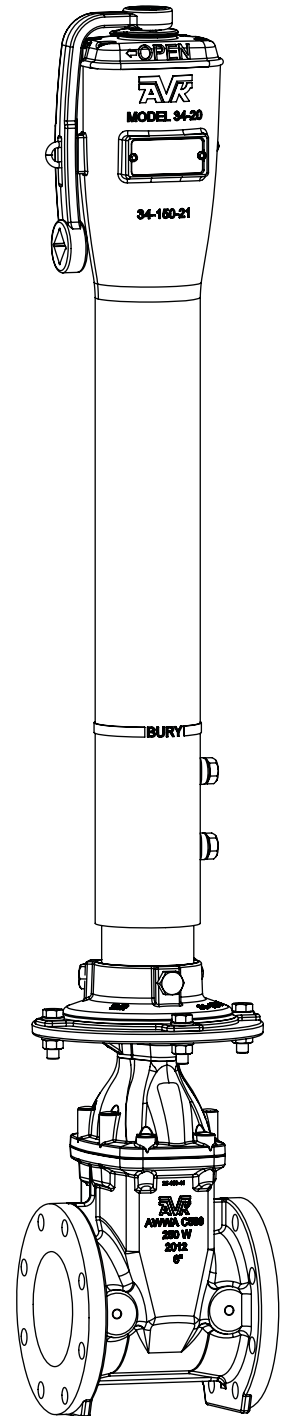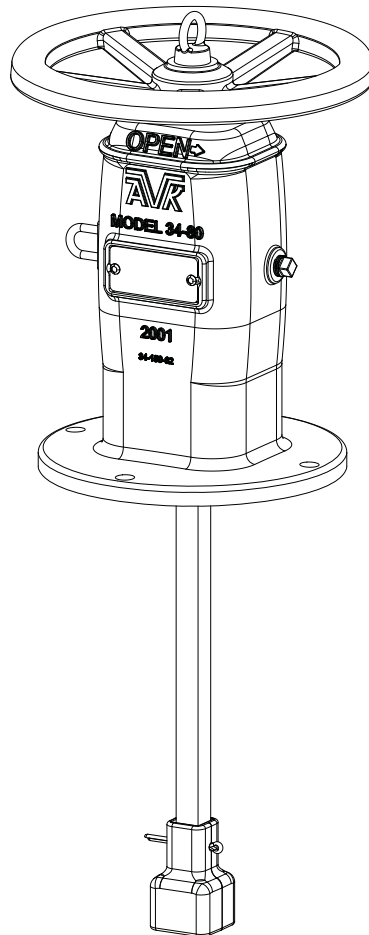


* For Series 3400 Assemblies manufactured after 8/12, and
Series 3480 Assemblies manufactured after 6/17.

Maintenance Manual Series 34

*Subject to change without notice. (rev.11/18 E)

Series 3400 Telescopic Post Indicator



page 1

| Item No. | Description | Material |
|----------|-----------------------------------|--------------------------------------|
| F216 | Bonnet Bolt | Zinc Plate, 304, 316 Stainless steel |
| F3 | Window Screw | 316 Stainless steel |
| F301 | Eyebolt | Zinc Plated Steel |
| F302 | Eye Bolt Washer M16x50x3 | Zinc Plated Steel |
| F303 | Handwheel (3480) | Grey Iron, ASTM A126, "B" |
| F304 | Stem Nut - Series 3480 | Copper Alloy |
| F305 | Wall Post Head | Ductile Iron, ASTM A536 |
| F306 | Window | Acrylic (PMMA) |
| F308 | Flange Bolt | Zinc Plate, 304, 316 Stainless steel |
| F309 | Flange Bolt Washer | Zinc Plate, 304, 316 Stainless steel |
| F310 | Flange Bolt Nut | Zinc Plate, 304, 316 Stainless steel |
| F311 | Wrench Nut Adapter Set Screw | 304 Stainless steel |
| F312 | 1/2" Pipe Plug | Zinc Plated Steel |
| F313 | Wall Post Stem | Mild Steel |
| F314 | Stem Nut O-ring | NBR |
| F315 | Stem Nut Snap Ring | 304 Stainless steel |
| F316 | Cotter Pin | 431 Stainless steel |
| F317 | Wrench Nut Adapter (3480) | Ductile Iron, ASTM A536 |
| F318 | Target | Copper Alloy |
| F319 | Shut Plate | Painted Aluminum |
| F320 | Plate Nut | Zinc Plated Steel |
| F321 | Open Plate | Painted Aluminum |
| F322 | Plate Attachment Screw | Zinc Plated Steel |
| F323 | Target Spacer | Mild Steel |
| F324 | Upper Stem Attachment Pin (3400) | 316 Stainless steel |
| F325 | Stem Nut - Series 3400 | Copper Alloy |
| F326 | Operating Wrench | Ductile Iron, ASTM A536 |
| F327 | Telescopic Post Head/Upper Barrel | Ductile Iron, ASTM A536 |
| F328 | Telescopic Post Upper Stem | Mild Steel |
| F332 | Lower Barrel | PVC - DR14 UL Listed |
| F333 | Lower Stem | Mild Steel |
| F334 | Wrench Nut Adapter (3400) | Ductile Iron, ASTM A536 |
| F335 | Telescopic Post Attachment Bolt | Zinc Plate, 304, 316 Stainless steel |
| F336 | Bell Adapter | Ductile Iron, ASTM A536 |
| F337 | Bonnet | Ductile Iron, ASTM A536 |
| | | |
| | | |
| | | |

MAINTENANCE

INTRODUCTION / DESCRIPTION:

American AVK supplies two models of Indicator Posts for valve sizes 4" through 16". The model 3400, Telescopic Indicator Post, and the model 3480, Wall Post indicator. Both models are UL listed and FM approved. (Note: FM approval to 14")

TOOL REQUIREMENTS:

INCH AND METRIC WRENCH / TOOL REQUIREMENTS FOR AMERICAN AVK POST INDICATORS

| Description/Item Number | Tool |
|---|------------------------------|
| Post Indicator Stem Nut (F304,F325) | Stem Operating Wrench (3400) |
| Target Plate Screws (F322) | Flat blade screwdriver |
| Wrench Nut Adapter Cotter Pin(F316) | Standard Pliers |
| Stem Nut Snap Ring (F315) | External Snap Ring Pliers |
| 1/2" Pipe Plug (F312) | Adjustable Wrench |
| Target Plate Nuts (F320) | 7/16" 11mm |
| Window Screw (Allen) (F3) | 5/32" 4mm |
| Wrench Nut Adapter Set Screw (Allen) (F311) | 15/64" 6mm |
| Flange Bolts/Nuts (F308,F310) | 15/16" 24mm |
| Attachment/Adjustment Bolts (3400) (F329) | 1-1/4" 30mm |
| Bonnet Bolts | 3/8" 10mm |

MAINTENANCE:

ADJUSTING THE TARGET (FOR SERIES 3400 TYPE INDICATORS): (For assemblies made after 8/12)

NOTE:

For an "open left" valve the "OPEN" sign should be mounted above the "SHUT" sign. (Fig. 2B) For an "open right" valve the "SHUT" sign should be mounted above the "OPEN" sign. (Fig. 2C).

1. With a 3/8", (10mm) allen wrench, remove the four Bonnet Bolts (F216) attaching the Bonnet (F337), to the Head/Upper Barrel Assembly (F327). (See Fig. 2A).
2. Pull the Bonnet and Target Assembly away from the Head/Upper Barrel.
3. If the Post Indicator is to be mounted on an open left valve, the "OPEN" Plate (F321) remains in the top position of the Target (F318). (See Fig. 2B).
4. To configure for "open right" remove the Plate Attachment Screws (F322), and Plate Nuts (F320) with a flat bladed screwdriver and 7/16", (11mm) wrench. Switch the locations of the "OPEN" and "SHUT" Plates. The "SHUT" Plate F319, should be mounted on top. (See Fig. 2C).
5. Re-attach the associated hardware. Ensure that the "OPEN" Plate is in the correct location for the size of valve that the Post Indicator is being mounted on.

NOTE: Each set of dimples in the target is marked for the correct valve size (4" through (12-16")). The Target Spacer (F323) should always be be mounted on the Attachment Bolts that attach the "OPEN" plate. (See Fig. 3, on page 5)

6. Lift the re-assembled post indicator Bonnet/Target Assembly onto the Head/Upper Barrel Assembly. Make sure the upper stem rod slides into the lower stem rod.
7. Install and tighten the four Bonnet Bolts (F216) attaching the Bonnet (F337) to the Head/Upper Barrel Upper Barrel Assembly (F327) .

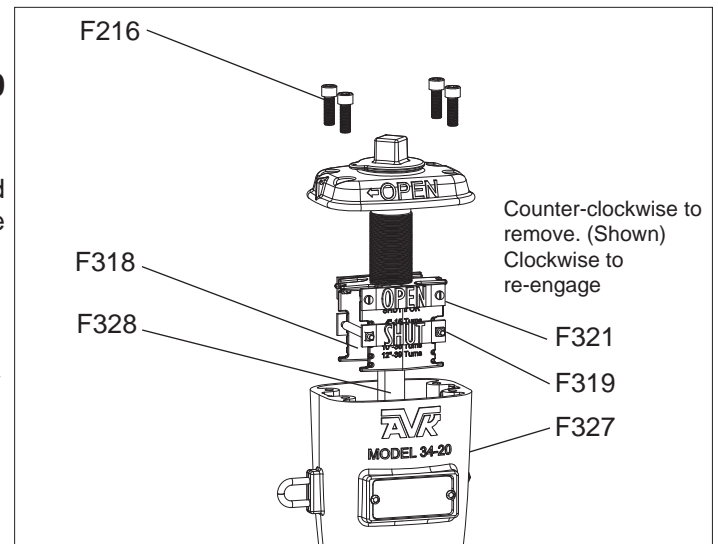


Fig. 2A

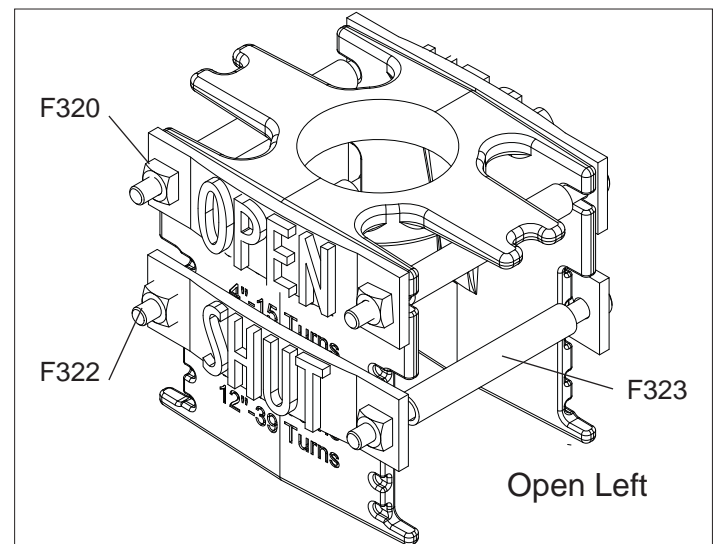


Fig. 2B

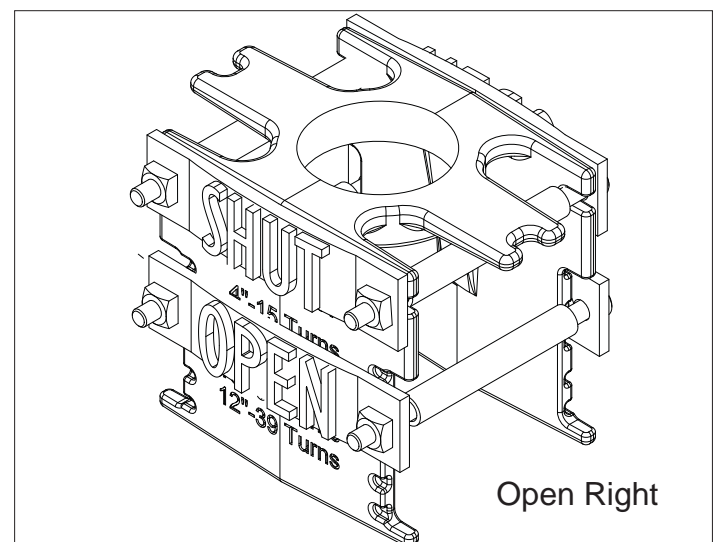



Fig. 2C

MAINTENANCE

ADJUSTING THE TARGET (FOR SERIES 3480 TYPE INDICATORS):

NOTE: For an "open left" valve the "OPEN" sign should be mounted above the "SHUT" sign. (Fig. 2B) For an "open right" valve the "SHUT" sign should be mounted above the "OPEN" sign. (Fig. 2C) In September 2010, American AVK switched series 34 post indicators from a preset 4-inch valve to a preset 6-inch valve. Refer to "ADJUSTING THE TARGET (FOR SERIES 3400 TYPE INDICATORS):"

1. Remove the four sets of Attachment Bolts/Washers/Nuts (F308, F309, F310) using a 15/16" (24mm) wrench. (See Fig. 1)
2. Lift the Post Indicator Head (F305) off of the Wall Post Stem (F313).
3. If present, turn the Handwheel (F303) counter-clock-wise to remove the Target (F318). If the Post Indicator does not have a Handwheel, use an adjustable wrench or Operating Wrench (F326) on the Stem Nut (F304) to remove the Target.
4. If the Post Indicator is to be mounted on an open left valve, the "OPEN" Plate (F321) remains in the top position of the Target (F318).
5. To configure for "open right" remove the Plate Attachment Screws (F322), and Plate Nuts (F320) with a flat bladed screwdriver and 7/16", (11mm) wrench. Switch the locations of the "OPEN" and "SHUT" Plates. The "SHUT" Plate should be mounted on top.
6. To re-engage the Target, turn the Handwheel or wrench clock-wise to thread the Target onto the Stem Nut. Continue to thread the Target onto the Stem Nut until the appropriate position Plate is centered in the Window (F306). The "OPEN" or "SHUT" should match the position of the valve. Insure that the valve is either fully open or fully closed. (See Section "MOUNTING THE TELESCOPING POST INDICATOR (SERIES 3400) ONTO A VALVE") on page 6.
7. Gently align and slide the assembled Post Indicator Head onto the Wall Post Stem.
8. Align the four bolt holes with the Post Indicator Plate on the valve and install the Attachment Hardware.

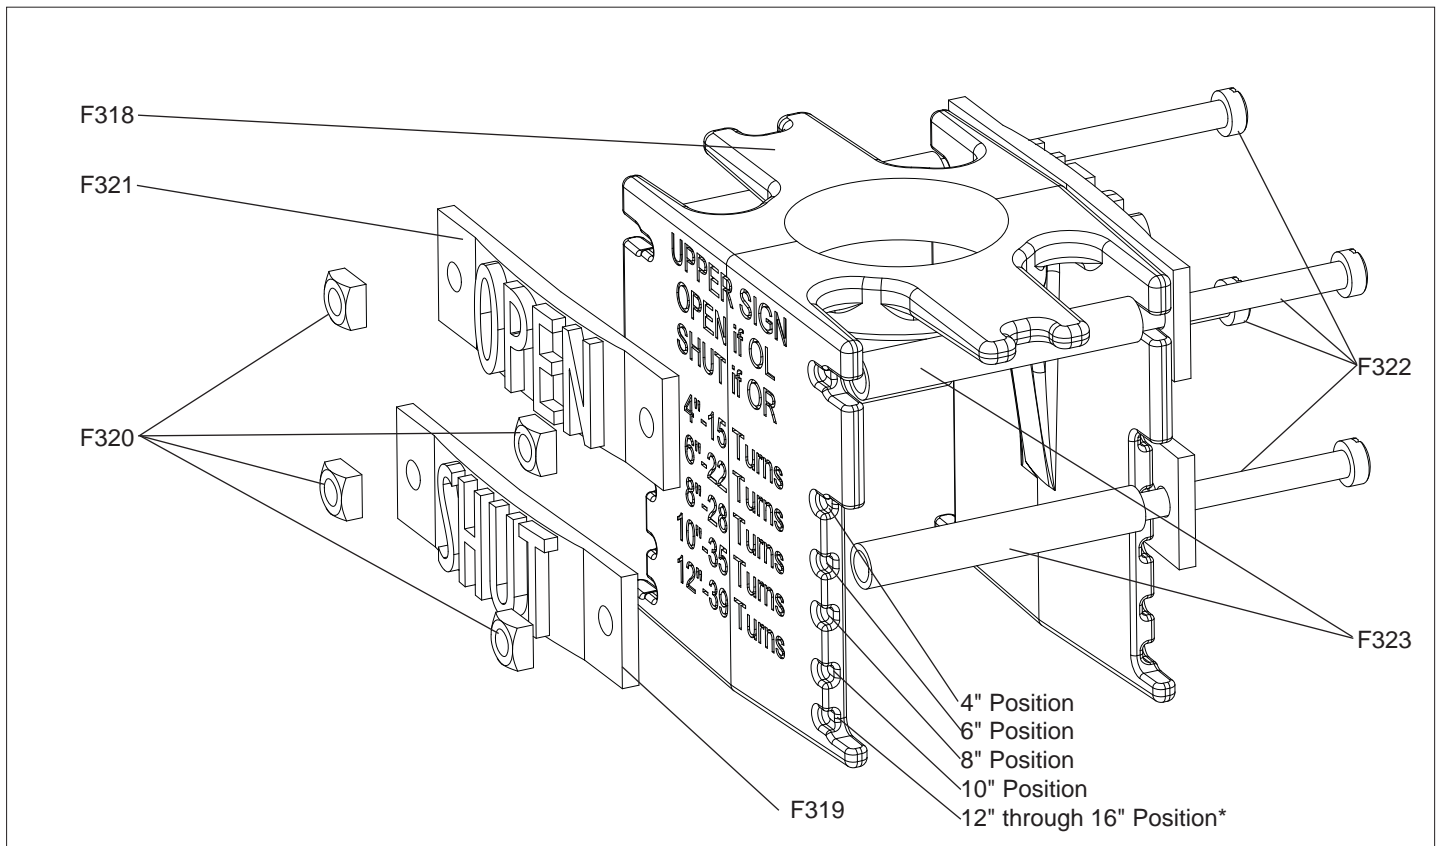

* For 14"-16" valves, the 12" position is used and a Stem Nut/ Target assembly with finer threads is used.

Fig. 3

MAINTENANCE

MOUNTING THE TELESCOPING POST INDICATOR (SERIES 3400) ONTO A VALVE:

NOTE: If the post indicator signs have not been adjusted to the correct valve size and opening direction, go to the section for "Adjusting the Target". The sign adjustment can be done after the post indicator has been mounted onto a valve but is much easier to adjust before the post indicator is mounted on a valve. In September 2010, American AVK switched series 34 post indicators from a preset 4-inch valve to a preset 6-inch valve. Refer to "ADJUSTING THE TARGET (FOR SERIES 3400 TYPE INDICATORS):"

CAUTION: If the Target assembly has not been adjusted correctly, it is possible for the Target to disengage from the Stem Nut. If this happens, the Target assembly will come to rest against the top of the Upper Barrel where it can be retrieved for proper adjustment. (Follow Steps 4&5 in the ADJUSTING THE TARGET FOR SERIES 3480)

1. Operate the valve so that it is either fully open or fully closed.
2. Using the Operating Wrench (F326), or an adjustable wrench, turn the stem nut on the post indicator until either the "OPEN" or the "SHUT" sign is centered in the window. The sign, "OPEN" or "SHUT", must match the gate position of the valve.

NOTE: The "OPEN" or the "SHUT" Plates may require minor adjustment to match the position of the mating Valve Wrench Nut. Slight offset of the Plates in relationship to the centerline of the Window is acceptable.

3. If present, remove the masonite cover from under the post indicator Bell Adapter (F336) with a 15/16", (24mm) wrench.

CAUTION: The lower stem will slide out if the post indicator is lifted vertically.

4. Holding the Lower Stem (F333) so that it will not slide completely out of the Lower Barrel (F332), lift the post indicator above the valve. (See Fig. 4A)

NOTE: The Wrench Nut Adapter (F334) is pre-attached to the Lower Stem (F333) at the Factory.

5. Position the post indicator Wrench Nut Adapter (#334) onto the valve wrench nut and tighten the Wrench Nut Adapter Setscrew (F311) with a 15/64", (6mm) Allen wrench (key). (See Fig.4B)
6. Lower the complete post indicator onto the valve post indicator plate of the valve. Align the post indicator Bell Adapter (F336) with the valve post indicator plate and install the four sets of Bolts, Nuts and Washers (F308,F309,F310) using a 15/16", (24mm) wrench. (See Fig.4C)
7. Operate the post indicator and check to see that the target signs are moving in the correct direction in relation to the movement of the valve gate. Cycle the valve completely open and closed to make sure the position of the signs are correct within the post indicator head.

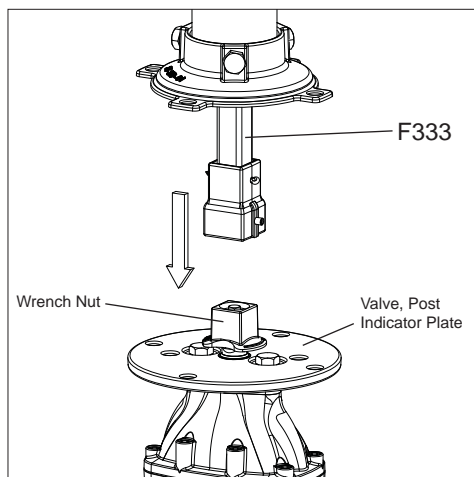


Fig. 4A

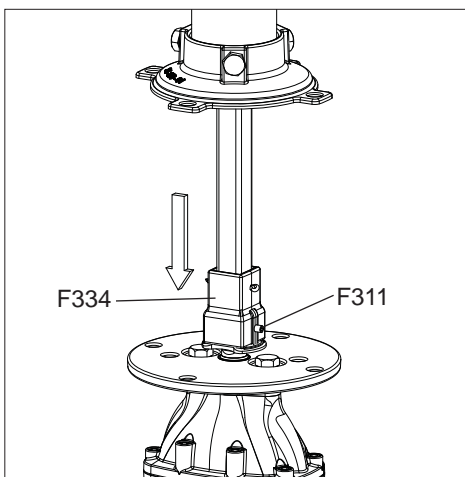


Fig. 4B

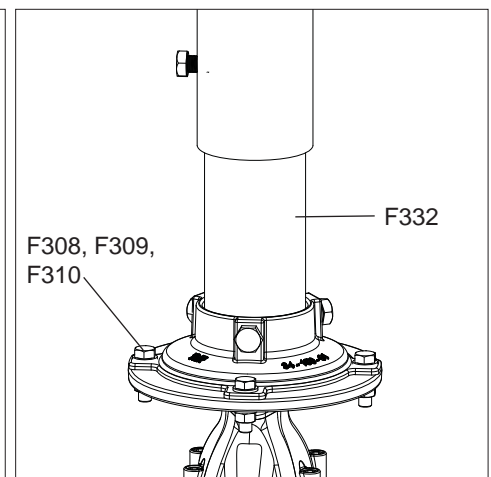


Fig. 4C

ADJUSTING THE POST INDICATOR TO THE GROUND LEVEL

NOTE: All AVK post indicators will telescope 22 ¼" (565mm) from the shortest to the longest length.

- 1. If you are adjusting the post indicator to the ground level after the post indicator has been installed onto a valve (standing vertically) then you must support the head assembly before proceeding to step 2.
- 2. Loosen the two Attachment Bolts (F335) positioned at the bottom-side of the upper barrel. (See Fig.5)
- 3. Lift or lower the upper barrel until the black stripe is at the ground level. The black stripe on the Upper Barrel is located approximately 30" (765mm) below the center of the sign window.
- 4. Tighten the two bolts on the bottom-side of the upper barrel. (See Fig.5)

| Valve Size | H1 (Inches/mm) |
|------------|----------------|
| 4" | 13"/330mm |
| 6" | 18"/455mm |
| 8" | 22.5"/575mm |
| 10" | 27"/685mm |
| 12" | 31"/785mm |
| 14"-16" | 41"/1041mm |

| Part Number | Length "L" ±4.0 | | H2 | | | |
|----------------|--------------------|--------|--------------|--------------|------------|------------|
| | Inch | MM | Inch min. | Inch max. | MM min. | MM max. |
| 34-150-61-00-X | 42.1 | 1070.0 | 20.0" | 43.0" | 505.0 | 1090.0 |
| 34-150-61-01-X | 64.2 | 1630.0 | 42.0" | 65.0" | 1065.0 | 1660.0 |
| 34-150-61-02-X | 86.2 | 2190.0 | 64.0" | 87.0" | 1625.0 | 2210.0 |


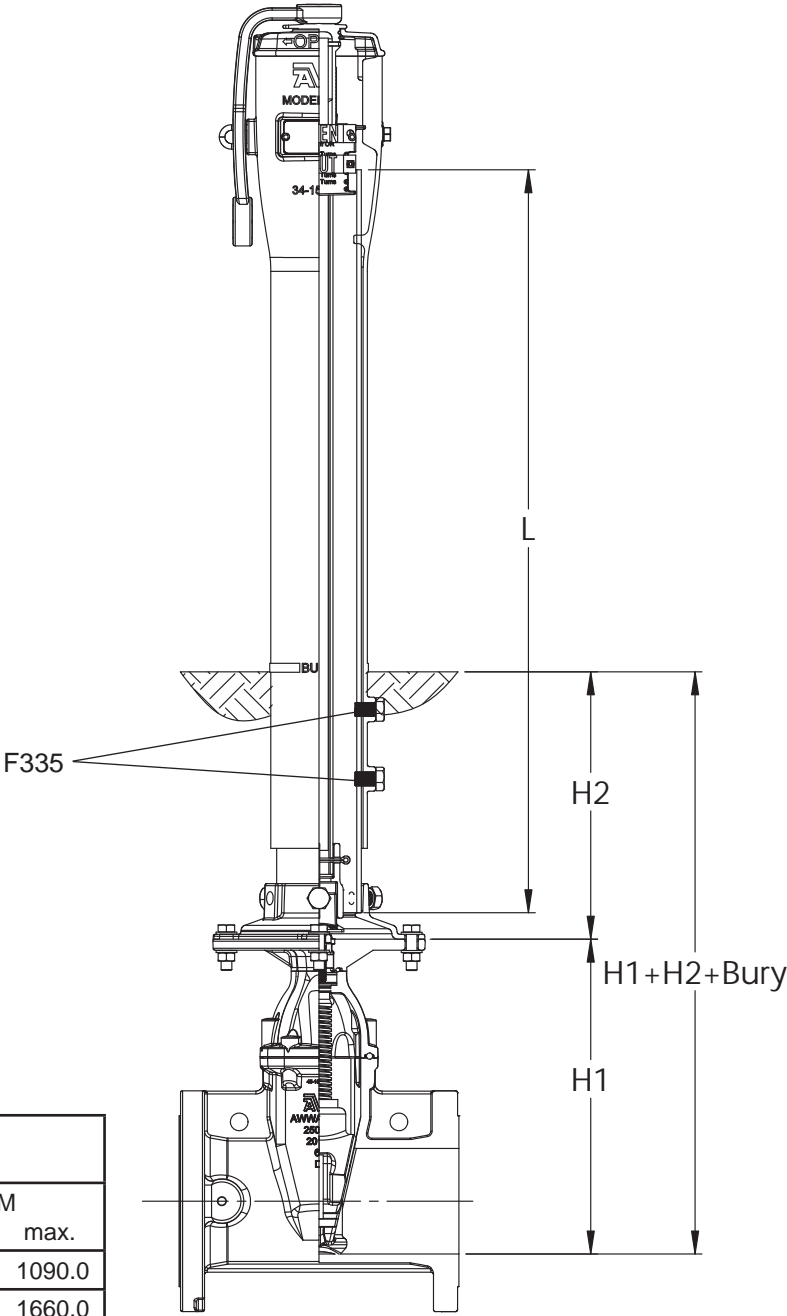


Fig. 5

WALL POST INDICATOR INSTALLATION CHART SERIES 3480


Combine A+B+C to determine which length of Wall Post Stem to order. The length of the Wall Post Stem must be equal to or greater than the sum of A+B+C. If greater than, trim the stem to fall between the dimensions in "Detail A"

Detail A
"A" = Length of Wall Post Stem. From outside of wall to end of Stem.
Minimum length of "A" 9.8"- 249mm
Maximum length of "A" 13.5"- 343mm

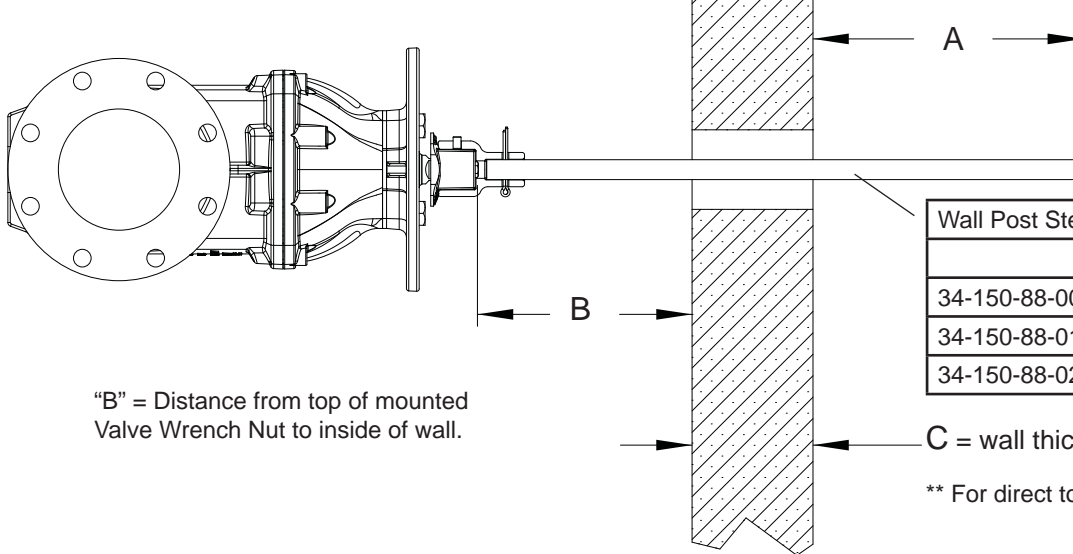

| Wall Post Stem Lengths | | |
|------------------------|------|--------|
| | Inch | MM |
| 34-150-88-00 | 9.8 | 250 ** |
| 34-150-88-01 | 29.5 | 750 |
| 34-150-88-02 | 49.2 | 1250 |

** For direct to valve mounting.

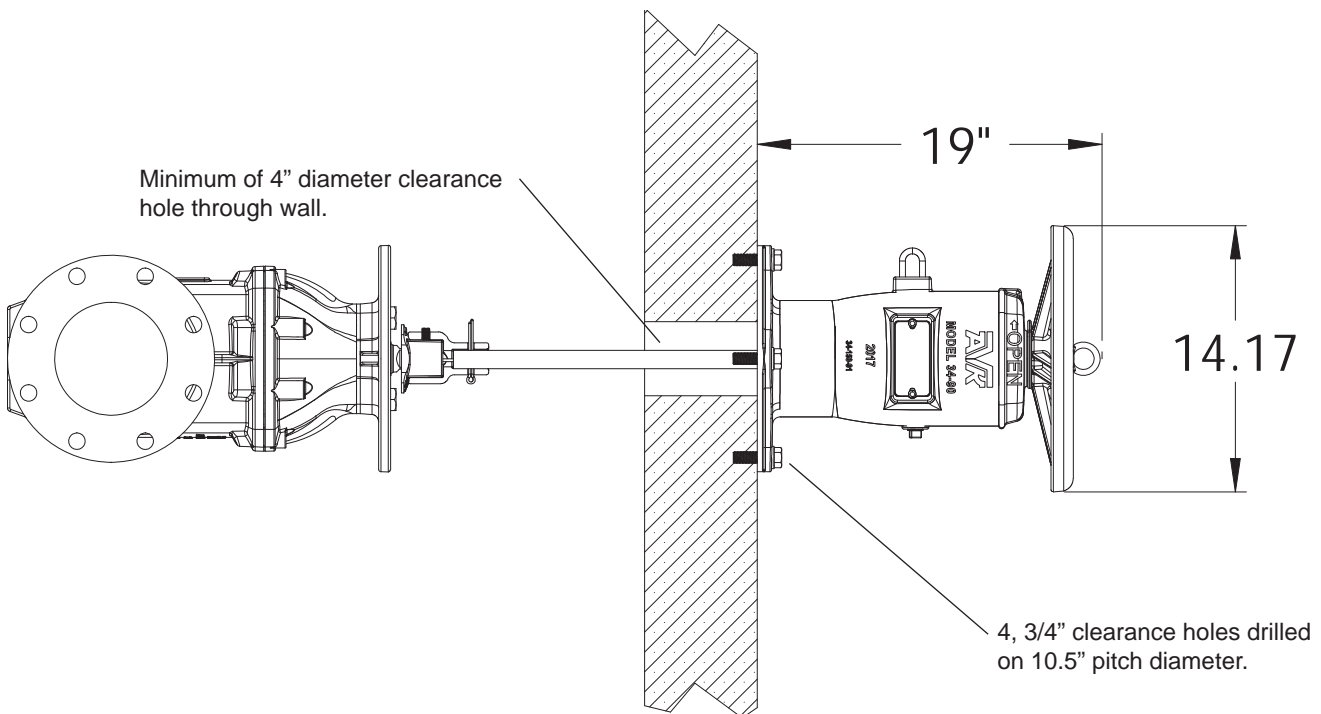

MOUNTING THE WALL POST INDICATOR (SERIES 3480) ONTO AN INSTALLED VALVE

NOTE: If the post indicator signs have not been adjusted to the correct valve size and opening direction, go to the section for "ADJUSTING THE TARGET". The sign adjustment can be done after the post indicator has been mounted onto a valve but is much easier to adjust before the post indicator is mounted on a valve. In September 2010, American AVK switched series 34 post indicators from a preset 4-inch valve to a preset 6-inch valve. Refer to "ADJUSTING THE TARGET (FOR SERIES 3400 TYPE INDICATORS): "

CAUTION: If the Target assembly has not been adjusted correctly, it is possible for the Target to disengage from the Stem Nut. If this happens, the Target assembly can be retrieved for proper adjustment. (Follow Step 5 in the "ADJUSTING THE TARGET FOR SERIES 3480")

1. Operate the valve so that it is either fully open or fully closed.
2. Using the Operating Wrench (F326), or an adjustable wrench, or the Handwheel (F303) turn the stem nut on the post indicator until either the "OPEN" or the "SHUT" sign is centered in the window. The sign, "OPEN" or "SHUT", must match the gate position of the valve.

NOTE: The "OPEN" or the "SHUT" Plates may require minor adjustment to match the position of the mating Valve Wrench Nut. Slight offset of the Plates in relationship to the centerline of the Window is acceptable.

3. Remove the masonite cover from under the Wall Post Indicator Head (F305) with a 15/16", (24mm) wrench.

NOTE: The Wall Post Stem (F313) and Wrench Nut Adapter (F317) are pre-assembled at the factory. Locktite has been applied to the threads of the Wrench Nut Set Screw (F311) to prevent loss during shipment.

4. A minimum 4" diameter access hole is required to install the Wall Post Stem Assembly. Insert the Stem Assembly through the wall and align the Wrench Nut Adapter (F317) with the Valve Wrench Nut. Slide the adapter over the valve wrench nut until it stops against the bottom flange of the wrench nut. Tighten the Set Screw (F311) to secure the adapter. (See Wall Post Installation Chart Series 3480)
5. Measure and cut if necessary, the end of the Wall Post Stem according to dimensions in "Detail A" of the Wall Post Installation Chart.

NOTE: The Wall Post Head has four, 3/4" mounting holes on a 10.5" pitch diameter. Mating mounting hardware should be installed prior to Step 6.

6. Using a sufficient supporting device, lift Wall Post Head Assembly and align the internal Stem Nut square relief with the Wall Post Stem. Minor adjustment of the Handwheel may be necessary to position the square relief correctly. (See Fig. 6)
7. Slide the Wall Post Head up to the wall and mount with appropriate hardware.
8. Operate the post indicator and check to see that the target signs are moving in the correct direction in relation to the movement of the valve gate. Cycle the valve completely open and closed to make sure the position of the signs are correct within the post indicator head.

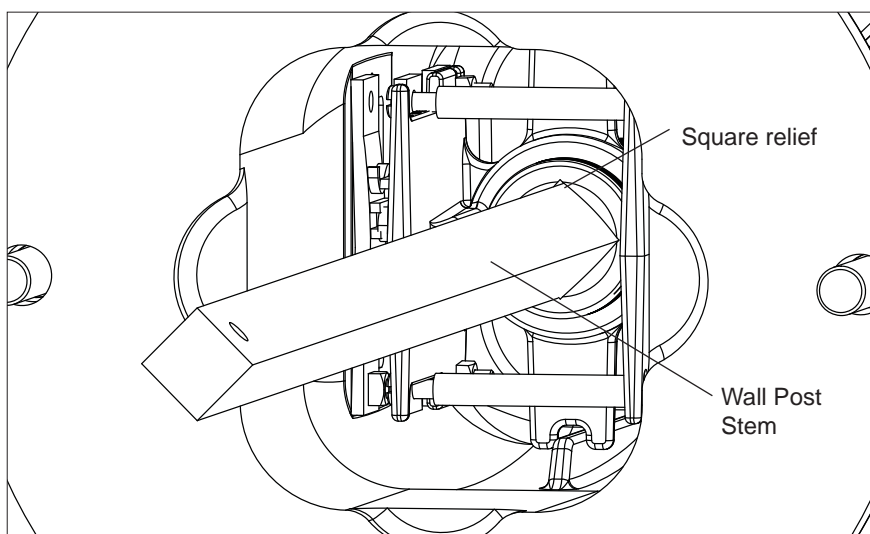


Fig. 6

INSTALLATION OF THE SUPERVISORY SWITCH

1. Remove the pipe plug located on the side of the post indicator head assembly.
2. Adjust the length of the switch-trip-rod according to Figs. 7,8 depending upon installation. See the "installation notes" below.
3. When mounting the switch, make sure that the switch-trip-rod is located between the two signs. This can be done by turning the post indicator stem nut until the target sign appears only partially in the window.
4. After installing the supervisory switch, turn the post indicator stem nut until the chosen sign appears in the window.
5. Make any necessary final adjustments to the supervisory switch.
6. After the installation is finished, operate the post indicator through a complete "open-close" cycle to see if the installation is correct.

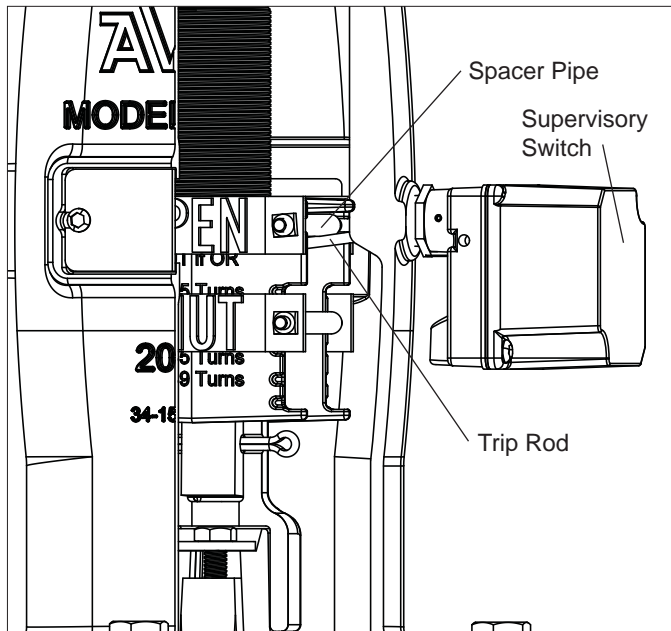


Fig. 7
Open Left Configuration

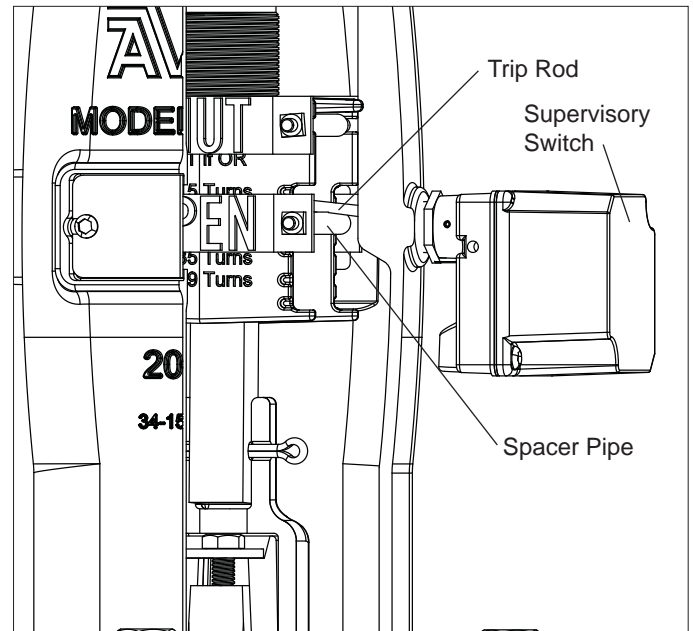


Fig. 8
Open Right Configuration

INSTALLATION NOTES:

For an "open left" valve in the "open" position and the supervisory switch is to trip when the valve is closed, the supervisory switch must be mounted so that the switch trip rod is positioned to be touching the underside of the upper sign spacer pipe as shown in Fig. 7.

For an "open right" valve in the "open" position the supervisory switch is to trip when the valve is closed, the supervisory switch must be mounted so that the switch trip rod is positioned to be touching the lower sign spacer pipe as shown in sketch Fig. 8.